



ACT 343 ProClick constant temperature controller

AFRISO Sp. z o.o.
Szałsza, ul. Kościelna 7
42-677 Czekanów
www.afriso.pl

Customer Service Team
tel. 32 330 33 55
fax 32 330 33 51
zok@afriso.pl

Art.-Nr 15 343 10

NOTICE

This instruction manual is also available on www.afriso.pl, in the "Online Catalogue" and "Downloads" tabs.

WARNING!

The product may only be mounted, commissioned and disposed of by qualified, specially trained staff. Electrical work should always be entrusted to a qualified electrician.

Alterations performed by unauthorized staff may cause a threat and are forbidden for safety reasons.



The product is powered by 230 V AC. This may cause severe injuries or death.

Do not let the product go into contact with water..

Do not alter the product in any way.

Before mounting the product please read the manual of the mixing valve.

APPLICATION

The ACT 343 ProClick constant temperature controller is used in water-based heating systems in order to maintain a constant temperature of the heating medium behind a rotary mixing valve.

It can be mounted on both 3- and 4-way valves. The wide temperature range (10÷90°C) combined with a clear, colour display allows for convenient automation and control of the operation of the heating system.

SCOPE OF DELIVERY

1. ACT 343 ProClick constant temperature controller equipped with a temperature sensor with a pipe mounting adapter, a knob with a double-sided scale ("from 0 to 10" and "from 10 to 0") and an electric cable with a plug.
2. Instruction manual.
3. Mixing valve mounting manual.

ProClick system disconnecting pushbutton

Colour display

HELP button



Fig 1. Construction of the ACT ProClick constant temperature controller

MOUNTING OF THE ACT ProClick CONSTANT TEMPERATURE CONTROLLER

Mounting and dismounting the controller on a mixing valve

To mount or dismount the controller, press and hold the ProClick system pushbutton (1), and then slide the actuator on or off the valve spindle (2).

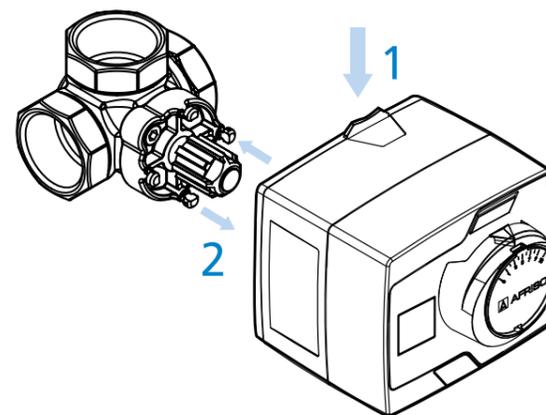


Fig. 2. Mounting/dismounting of an ACT ProClick controller on a valve

1 2
page
3 4

The controller can be mounted on the valve in four different positions (Fig. 3), the display will always automatically orient itself horizontally. The blue ring with indicator must point upwards. If it does not, pull off the knob and blue ring, then mount it back with the indicator pointing upwards.

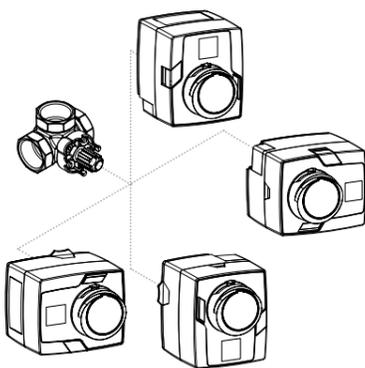


Fig. 3. Possible mounting positions

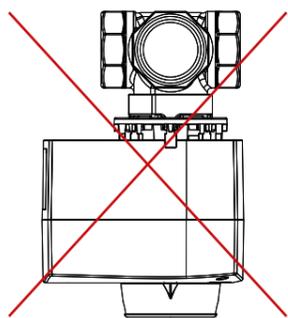


Fig. 4. Improper mounting position

The temperature sensor should be mounted behind the valve by using the adapter included, or a specially prepared sleeve.

Factory mounted plug to connect the power to the device.

CONFIGURING THE ACT ProClick CONSTANT TEMPERATURE CONTROLLER

1. Initiating the controller settings

Take off the knob (Fig. 5.) and then press and and buttons for 5 seconds.

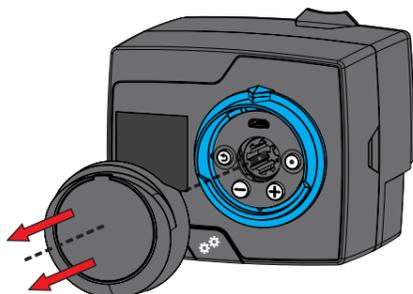


Fig. 5. Buttons under the ACT ProClick controller knob.

2. Diagram selection

Select the appropriate diagram in accordance with the mixing valve mounting position in the system. The available diagrams are: mixing valve mounted on the supply pipe (Fig. 6.) or mixing valve mounted on the heat source return pipe (Fig. 7.). If the controller is mounted on a 4-way valve, select the diagram showing mounting on the return pipe (Fig. 7.). Then, select the rotation direction and install the temperature sensor as show in Fig. 8.

3. Opening direction

After selecting the appropriate diagram, the next step is to select the direction of opening the valve. When the ACT ProClick constant temperature controller is mounted on the supply pipe (Fig. 6.) to maintain a constant temperature of the heating medium entering the system, the direction of operation of the controller should be chosen to ensure that rotating the valve sleeve in the chosen direction increases the flow of medium from the heat source into the system.

The setting indicates controller operation to the right – clockwise.

The setting indicates controller operation to the left – counterclockwise.

4. Temperature setting

In the next step, you have to select the minimum temperature (T_{min}), below which the valve will be 100% open to the heat source. Then, you have to select the maximum temperature (T_{max}), above which the valve will completely cut off the flow of the hot medium from the heat source, and open fully to the colder medium flow from the return pipe. Then, you need to select the mixed medium temperature you choose to maintain, between T_{min} and T_{max} . The icon indicates exiting the settings and returning to the starting screen.

5. Selecting the scale

In the last step, you need to select the right scale, either "0 to 10" or "10 to 0", corresponding to the chosen diagram (Fig. 6., Fig. 7., Fig. 8.). To change the scale, you need to lift up the plate, and put it on again facing the other side.

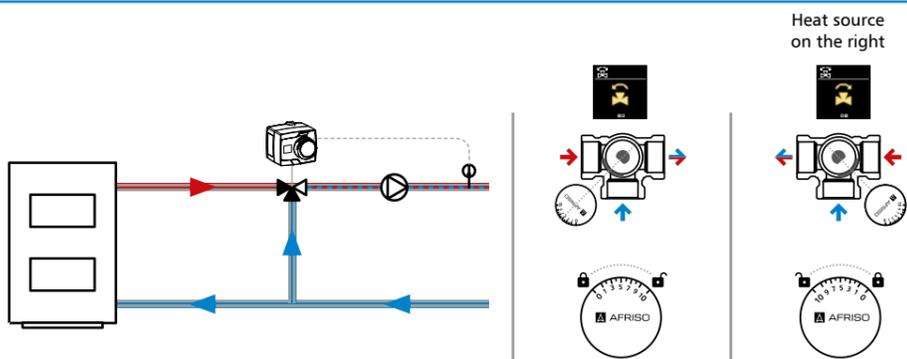


Fig. 6. Diagram with the mixing valve mounted on the supply pipe to maintain a constant temperature of the medium in the system.

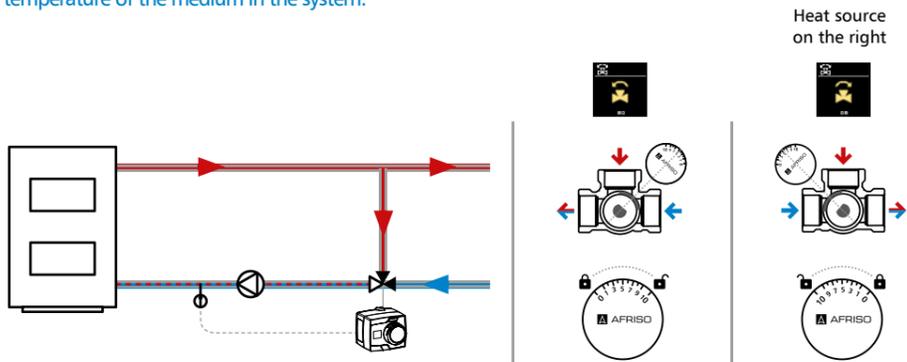


Fig. 7. Diagram with the mixing valve mounted on the return to the heat source, in order to protect the heat source against low-temperature corrosion.

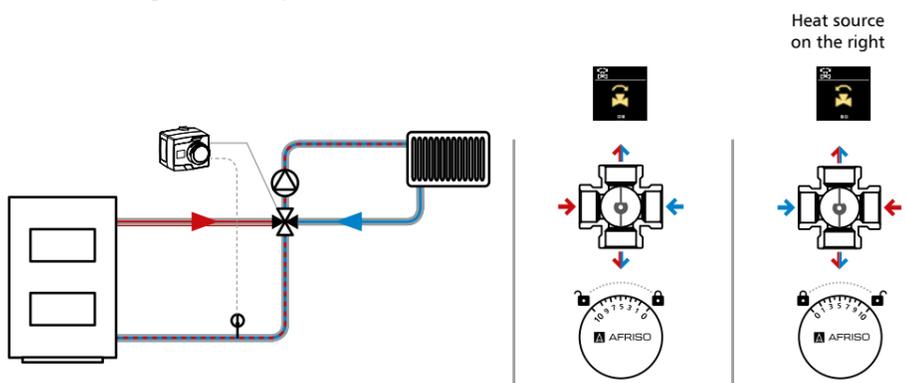


Fig. 8. Diagram with a 4-way mixing valve mounted in order to protect the heat source against low-temperature corrosion.

The required mixed temperature setting can also be changed through pressing and holding both the \oplus and \ominus buttons for 1 second, without having to go through the whole menu.

5 6
strona
7 8

2. Icon description


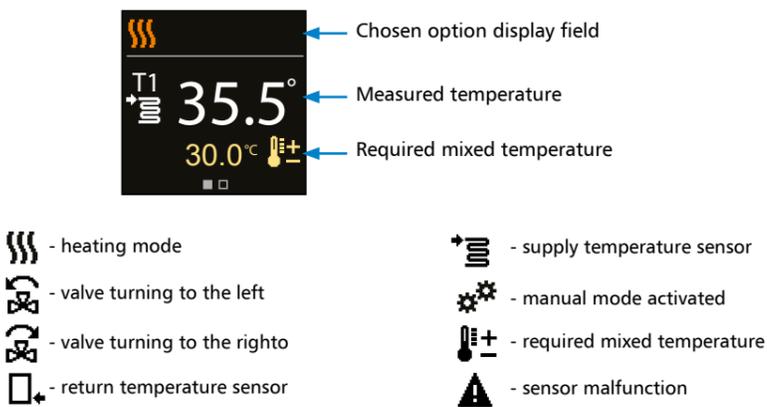


Fig. 10. Description of the symbols displayed on the controller.

TECHNICAL PARAMETERS

Parameter / piece	Value / material
Torque	6 Nm
Temperature range	10÷90°C
Rotation angle	90°
90° turning time	120 s
Power voltage	230 V AC
Ambient temperature range	10÷50°C
Power consumption	max 3 W
Housing protection class	IP42
Dimensions (H x W x D)	85,5×97×99 mm
Weight	800 g
Housing material	Black, PC
Mode of operation	Heating
Power cable length	2m, with plug
Temperature probe cable length	1m, pipe contact adapter included
Thermocouple dimensions	10×ø4 mm
Control algorithm	PID

DEVICE MENU MAP

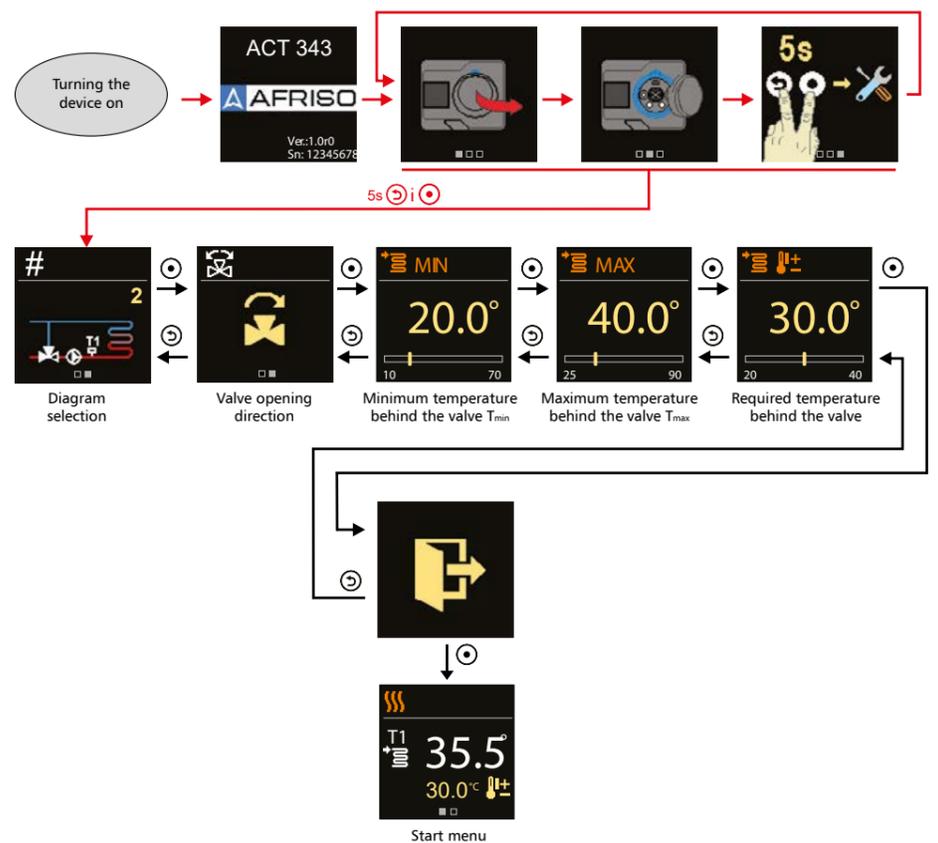

OPERATING THE ACT ProClick CONSTANT TEMPERATURE CONTROLLER

1. Mode of operation of the ACT constant temperature controller

Switching from automatic to manual mode is done by pressing the manual mode pushbutton.



Fig. 9. Manual mode pushbutton.

When the pushbutton is in the upper position, the controller is in the automatic mode. When the pushbutton is pressed down, manual operation, meaning freely turning the controller knob, is possible. Additionally, the ⚙ symbol is displayed during manual operation.

DECLARATIONS AND STATEMENTS

AFRISO Sp. z o.o. hereby states that this product is compliant with the following directives:

- LVD (2014/35/EU) on low-voltage equipment,
- EMC (2014/30/EU) on electromagnetic compatibility,
- RoHS II (2011/65/EU) on restricting the use of hazardous substances in electrical and electronic equipment,
- REACH regulation on limitations of chemicals 1907/2006/UE.

The full text of the EU declaration of conformity can be found at the following websites: www.afriso.pl and www.afriso.com



MAINTENANCE

The ACT ProClick controller is a maintenance-free product.

DECOMMISSIONING, DISPOSAL



1. Disconnect the power supply.
2. Dismount the device.
3. To protect the environment, this product must not be disposed of together with regular household waste. Dispose of the product according to local directives and guidelines.

This device consists of materials that can be reused by recycling companies.

WARRANTY

The manufacturer's warranty for this product is 36 months after the date of sale from AFRISO Sp. z o.o.. In case of any alteration of the product or usage against this instruction manual, the warranty becomes void.

CUSTOMER SATISFACTION

For AFRISO Sp. z o.o. customer satisfaction is the prime objective. Please contact us if you have any questions, suggestions or problems concerning our product: zok@afriiso.pl.